G6037087R0-01

JUST MIXER

Owner's Manual

3 Stereo / 5 Mono Channel Mixer

Thank you for purchasing the JUST MIXER. To take full advantage of the JUST MIXER, and to ensure Proper operation, please read this owner's manual carefully.

Features

Stereo 3 in/1 out Configuration

3 stereo devices on JUST MIXER can connect up to 5 mono device.

Microphone Setup

By Gain knob adjustment, input signal level is adjusted to input signal level of microphone.

※ Only dynamic microphone or Battery-powered condenser microphone can be used. (high-sensitivity microphones is recommended)

Overload Indicator

The OVER LED allow you to set the best signal level for optimum audio performance.

Specifications

- 3 stereo / 5 mono input
- 1 stereo output
- Weight : 90g (no battery)
- L / R Balance control
 Gain control : Max 20 dB

• 1.5V(AAA) x 2 or 5V Power bank

Accessory : 1.5V(AAA) x 2
 Rubber Gaske x 4

• Dimensions : 68 x 105 x 24mm

Owner's Manual

Operation

- 1. Turn off power switch of JUST MIXER (in the middle).
- 2. Insert source signal to INPUT 1 to 2 Jack.
- 3. Insert signal to AUX Jack.
- 4. OUTPUT Jack could connect with speaker box or other output device.
- 5. The adjustment GAIN, AUX and VOLIME knobs to confirm input source signal level.
- 6. After output mix source, use MASTER Volume Slider to tune up / tune down volume.





1. INPUT Jack: Devices (electronic instruments or microphone, for example) with TRS mini

plug should be connected to these inputs.

2. AUX IN Jack: This input jack is ideal for connection gevices that do not require L/R balance adjustment (audio equipment, for example).

3. OUTPUT Jack: This jack provide output of the final mixed signals. They can be connected to a PA system.

- 4. POWER Indicator: This indicator lights when the JUST MIXER is turned on.
 5. OVERLOAD Indicator : This indicator light when the mixed signal level is too high. If this LED light frequently, lower channel counterclockwise.
- * This indicator is not affected by the position of the master volume slider.

6. BALANCE Knob: This knob adjust the stereo input balance for each channel. At the center position, the left and right signals are at the same level. Rotating the knob clockwise or counterclockwise will shift the sound field to the right or left respectively.

7. AUX Knob: This knob adjusts the input level of the device connected to the AUX IN (Auxiliary Input) jack. * The AUX IN knob controls the L/R input signals simultaneously.
8. GAIN Knob: This knob adjust the input volume for each channel. They are used to optimize the signal level to avoid distortion.

Rotating a GAIN knob clockwise will increase the volume, while rotating it counterclockwise will decrease the volume. When a microphone is connected to one of the INPUT jack, be sure to rotate the corresponding GAIN knob completely clockwise (near to the "10" position). * Each GAIN knob controls the L/R signals in each channel simultaneously.

9. MASTER VOLUME Slider: This slider adjusts the overall output of the JUST MIXER.
10. CHANNEL VOLUME Slide: This slider provide volume control for each channel. Set these sliders relative to one another to achieve the best audio mix.

* Each volume slider controls the L/R signals in each channel simultaneously.

11. POWER Jack: Connect a 5V Power bank to this jack.

12. POWER Swithc: Power ON/OFF of JUST MIXER

Important Notes

It is recommended not to use power bank with other devices to avoid noise.

NOTES CONCERNING BATTERIES

- If you heard noise, it may because battery power is running low. Please replace the battery.
- The life of the supplied batteries may be limited, since its primary purpose was to enable testing.
- When installing or replacing batteries, always turn this unit off and disconnect any other devices you may have connected. This way, you can prevent malfunction and damage.
- If used improperly, batteries or rechargeable batteries may explode or leak and cause damage or injury. In the interest of safety, please read and observe the following precautions.
 - Carefully follow the installation instructions for batteries, and make sure you observe the correct polarity.
 - Remove the batteries whenever the unit is to remain unused for an extended period of time.
 - Used batteries must be disposed of in compliance with whatever regulations for their safe disposal that may be observed in the region in which you live.

PLACEMENT

- Do not subject the unit to temperature extremes (eg., direct sunlight in an enclosed vehicle).
- Avoid using or storing the unit in dusty or humid areas, or areas that are subject to high levels of vibration.
- Using the unit near power amplifiers (or other equipment containing large power transformers) may induce hum.

MAINTENANCE

For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a mild, nonabrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth. Never use benzene, thinners, alcohol or solvents of any kind, to avoid he possibility of discoloration and/or deformation.

ADDITIONAL PRECAUTIONS

When the following situation occur please turn the power off Immediately: Objects have fallen into, or liquid has been spilled onto the unit; or The unit has been exposed to rain(or otherwise has become wet);or The unit does not appear to operate normally or exhibits a marked change in performance.

MAKER HART INDUSTRY CORP.

2F., NO.3, LN. 263, CHONGYANG RD., NANGANG DIST., TAIPEI CITY 11573, TAIWAN (R.O.C) Email: info@makerhart.com http://www.makerhart.com https://www.facebook.com/Makerhart2015/



English