




Foot Operated Sanitizer Dispenser System
FPS-02

Pedal DE Shu !


Thank you for purchasing the『Pedal DE Shu!』this time.
To take full advantage of the product, and to ensure proper operation,
please read this manual carefully before use.
Also, please keep this manual in a safe place after reading it.

- | | | | |
|--------------|--------------|-----|--|
| Items | Body | × 1 | *This product is only for spraying disinfectant. |
| | Spray bottle | × 1 | *No batteries required. |
| | Panel・Clip | × 1 | |
- *The tripod is not included in this product.

How to use, and attach

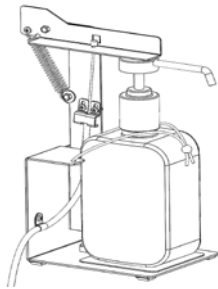

Please use the attached bottle (capacity 500cc) with the disinfectant.
When you step on the red part of the pedal, a mist of disinfectant will come out from the nozzle of the bottle.
*The amount of one spray is about 0.7cc.
If it is not enough, step on the pedal again and spray the disinfectant.
*Just after adding the disinfectant in the spray bottle, it is difficult for the liquid to come out, so step on the pedal several times to spray.

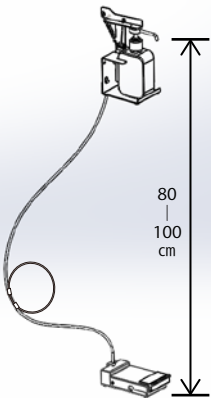

Place the pedal on a flat floor before use.

- * It is designed to be stepped on with your feet, so you may feel stiff when you push it by your hands, but it is not a malfunction.
- * Just after tightening the lid of the bottle, the liquid can not be sprayed with a few pushes at first to pump up the liquid. Before installing the body, push the lid by your hands several times to check whether it is sprayed or not.
- * If you don't use it for a while, the alcohol in the pump will volatilize and the liquid may not come out even if you step on the pedal.

The wire cable is fixed in the center, but please keep it in the center without removing it.

- * When installing, set the nozzle at the height from the floor to 80-100 cm as a guide.



Use a stable table, desk, or tripod for the upper unit.
Since there is screw hole for 1 / 4-20 UNIC screw on the bottom of upper unit, you can set to a tripod.
* Some items, such as large tripods for large cameras, are not supported.

The laminate panel can be attached freely with the attached clip.
Please set it in a place where you can easily see it.



■ Safety precautions

Never fail to observe.
Items described here are for using the product safely and properly, and to prevent hazards and injury to the user and other persons before they occur.
After reading this manual, the user should preserve it in a place where it can be referred to at any time.

WARNING/CAUTION

The contents that are expected to occur if handled improperly are listed according to the magnitude of harm or damage and the degree of urgency.

⚠WARNING The content is "possibilities of death or serious injury".

⚠CAUTION The content is "possibilities of damage or property damage".

- ※Example of graphic illustration
- 🚫 This symbol means "prohibited" (never do this).
- This symbol means "compulsory" (be sure to do).

Notes on installation

- ⚠WARNING** 🚫 **Use according to the standard which is based in the specifications.**
It may cause damage, accident, or malfunction if it is installed out of standard.
Install the product in the place where is sturdy and flat properly.
 - 🚫 If you install the product improperly or if you step on the pedal the place where there is a bump, it may cause a fall, injury, malfunction.
- ⚠CAUTION** 🚫 **Do not put harmful liquids in the bottle.**
 - 🚫 **When installing, be careful not to get your feet or hands caught in the cable.**
It may cause injury or malfunction.
 - 🚫 **Do not use outside where the temperature is extremely low or in a warehouse where the temperature is high.**
The operating temperature environment is -5 °C to 40 °C.
 - 🚫 **The wire cable is fixed once in the center, so use it as it is.**

Precautions for use

- ⚠WARNING** 🚫 **When the product is used by children, be careful not to put the spray liquid in their eyes.**
- ⚠CAUTION** 🚫 **Perform regular inspections.**
Perform regular inspections and do the cleaning to maintain the safety and performance of installation.
- 🚫 **When using the pedal with bare feet, be careful not to pinch your feet.**
If your foot is caught under the pedal, you may get injured.
Push the spray before installing the main body, check whether the disinfectant is sprayed or not, and then set it on the body.
- 🚫 **Push the spray before installing the main body, check whether the disinfectant is sprayed or not, and then set it on the body.** Since it need to pump up the liquid, the liquid is not sprayed even if you push it several times at first. In that case, step on the pedal several times.
- 🚫 **Do not kick or throw the pedal.**
It may cause injury or malfunction.

Precautions for relocation/repair

- ⚠WARNING** 🚫 **Never disassemble, repair or modify.**
It may cause injury or malfunction. Please contact us for repairs.
- 🚫 **It may cause injury or malfunction. Please contact us for repairs.**

Precautions for disposal

- ⚠CAUTION** 🚫 **Follow local rules when disposing of the product.**

* We will repair the damage caused by the fall for a fee. We will repair the malfunction during normal use free of charge.
Please feel free to contact us.

*We also sell additional replacement bottles.
One 550 yen (by excluding tax and shipping)

* If you want to use a bottle except for the attached bottle, please feel free to contact us.

*The product design, specifications, appearance, and prices may change without prior notice.



Manufacturer

HarmoTECH Co., LTD.

125 Daikumachi, Naka-ku, Hamamatsu,
Shizuoka, Japan 430-0936

— Contact us —
Mail: info@harmotech.co.jp
URL: www.harmotech.co.jp

